

Solarity

Radio Motor Quick Notes

BAT-R
STD-ACR
IQM-ACR
IQM-DCR

Installer's Quick Notes

Step 1: Power up one motor at a time. Motor will respond with a quick up/ down jog.

Step 2: Take remote/switch and put it on desired channel you want motor to operate on by pressing set button.

Step 3: Press the UP and Down buttons together on remote/switch until motor gives you an up/down jog.

Step 4: Locate programming button. Remote= programming button on back. Switch= button on side. Special instructions apply for other devices and additional steps may be needed. Press button until motor jogs up and down. Programming Complete.

Readjusting limits

** If the upper and/or lower limit needs re-adjusting do the following:

To change the Lower limit: Move the motor to its current lower limit position and let it stop. Press the UP and Down buttons simultaneously until motor jogs, then release. Adjust to a new lower limit position. Press the STOP button until motor jogs, then release. Check new limit.

To change the Upper limit: Move the motor to its current upper limit position and let it stop. Press the UP and Down buttons simultaneously until motor jogs, then release. Adjust to a new upper limit position. Press the STOP button until motor jogs, then release. Check new limit.

IPC.1582/Rev.1

Installation Questions?

Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556

INPRO 
CLICKEZE PRIVACY
SYSTEMS