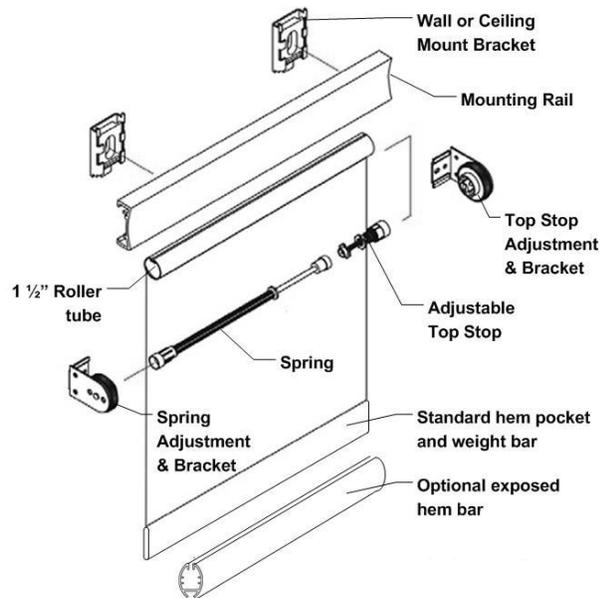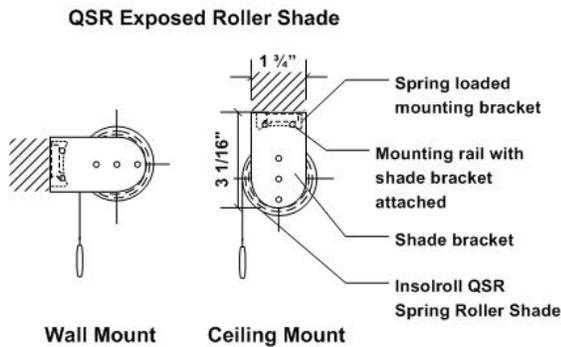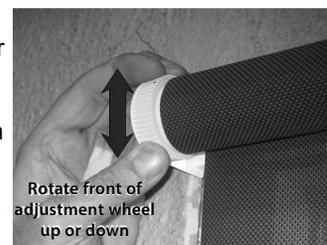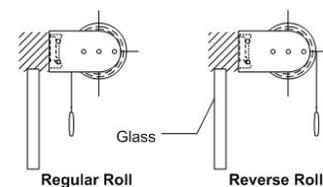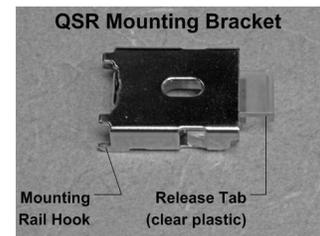# Solarity™ Quiet Spring Roller (QSR) Shades

## Installation Instructions

All Quiet Spring Roller (QSR) Shades come with an adjustable stop system and are shipped fully assembled. **Mounting screws are not provided.** (#6 x 1 ½" panhead screw will work for most installations. The type and size of screw required will vary depending upon the mounting surface).



QSR Exposed Roller Shade

- 1 ¾"
- 3 1/16"
- Spring loaded mounting bracket
- Mounting rail with shade bracket attached
- Shade bracket
- Insolroll QSR Spring Roller Shade

**Wall Mount**  **Ceiling Mount**



- Wall or Ceiling Mount Bracket
- Mounting Rail
- 1 ½" Roller tube
- Top Stop Adjustment & Bracket
- Adjustable Top Stop
- Spring
- Spring Adjustment & Bracket
- Standard hem pocket and weight bar
- Optional exposed hem bar

### EXPOSED ROLLER SHADE INSTALLATION

1. **Determine mounting position of shades.** The mounting brackets and mounting rail are universal and can be installed as wall or ceiling mount. The mounting brackets should be located close to the end of mounting rail at each end. Additional mounting brackets are supplied on wider units and should be centered between outer brackets.

2. **Attach wall/ceiling brackets. On wall mount, mounting brackets should be installed with the** clear release tab facing down to allow for easy removal of the shade. On ceiling mount, the clear release tab should be facing forward.

3. **Install shade.** On wall mount, hook the top of mounting rail over the mounting rail hook. Rotate mounting rail down toward wall and pull down on rail until it clicks into mounting bracket. On ceiling mount, hook back of mounting rail over mounting rail hook and rotate up and pull forward until it clicks into mounting bracket. *To remove shade, press release tab in toward bracket and rotate mounting rail in opposite direction from description described above.* Shade can be installed as regular roll with shade rolling off back closer to window or reverse roll with shade rolling off on room side of roller.

4. **Adjust Tension.** Spring tension adjustment is on left hand side on regular roll shade (right hand side for reverse roll). To adjust tension after installation, rotate spring adjustment on left hand side of shade. Hold the shade and rotate front side of adjustment wheel down for additional tension or up for less tension. This adjusts the speed of the shade while rolling up.

5. **Adjust top stop.** Top stop adjustment is on right hand side on regular roll shade (left hand side for reverse roll). Once shade is fully installed, rotate



QSR Mounting Bracket

Mounting Rail Hook  Release Tab (clear plastic)



Glass

**Regular Roll**  **Reverse Roll**



Rotate front of adjustment wheel up or down
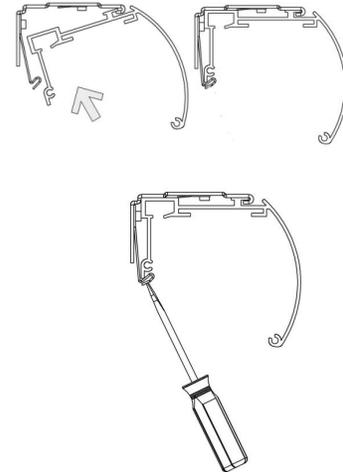
IPC.1525/Rev.2

right wheel front side of adjustment wheel down to raise hem bar or up to lower hem bar when fully raised. Allow the shade to turn while adjusting wheel.  Sets upper limit so hem bar hangs down below shade.

6. **Test shade operation.**  Run shade up & down several times to insure that proper tension and stops have been set.

**OPTIONAL 3" or 4" CASSETTE INSTALLATION**
1. **Determine exact mounting location for cassette.** Cassette system is shipped assembled.  Cassette system utilizes universal mounting brackets that can be mounted for wall or ceiling mount.
Locate the mounting brackets within an inch or two from each end of shade and evenly space intermediate brackets on wider units. Attach brackets with #6 or #8 x 1 ½" pan head or hex head screw (not provided).  Note that factory takes 3/16 inch deduction for inside mount.
2. **Snap the cassette into mounting brackets** by hooking the top front of cassette into bracket and then swinging up until it snaps into bracket.  (*To remove cassette, insert flat head screwdriver into mounting bracket slot provided, then back to release cassette*).

**Adjust shade tension and top stop as needed.**
Follow # 3, 4, & 5 above.

JUNIPER™ **Commercial Window Treatments**
**inpro.com • 800.222.5556 • 262.679.9010**
**World Headquarters** S80 W18766 Apollo Drive, Muskego, WI 53150  USA
**Installation Hotline:** 866.394.6776

**inpro**®