

BioPrism® Solid Surface

Installation Instructions Large & Small Soap Dish

Please read all instructions before installing products.

1. Make sure all surfaces are clean and free of dust, dirt, grease, and soap scum.

fig.1

2. Install the soap dish in the corner of the shower or tub surround. Determine the height of the soap dish and mark the location on the wall.

3. Apply two quarter size dabs of silicone adhesive to each back surface of the soap dish.

See Figure 1.

4. Apply a quarter size dab of hot melt glue to each back surface of the soap dish.

See Figure 1.

5. Immediately press the soap dish into the corner and hold until the hot melt sets-up.

6. Apply a bead of silicone around the perimeter where the soap dish meets the walls. Remove any excess adhesive with denatured alcohol.

7. Allow the silicone to completely cure before use.


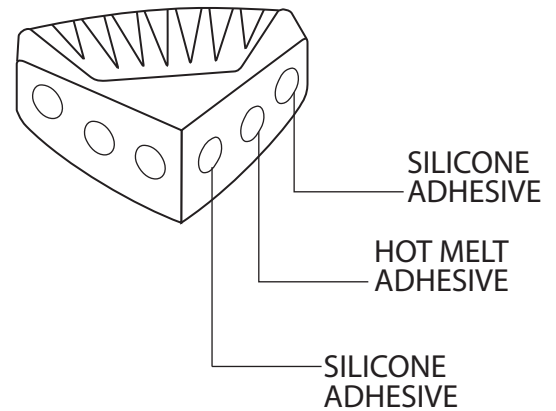


fig.2

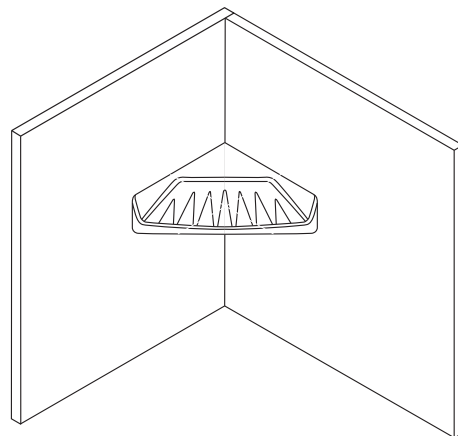

IPC.1316/REV.3

Installation Hotline • 866.EZINPRO
Inprocorp.com • 800.222.5556 • 262.679.9010
World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

ENDURANT® •
WASHROOM SYSTEMS