


Nanotrak™ Cubicle Track

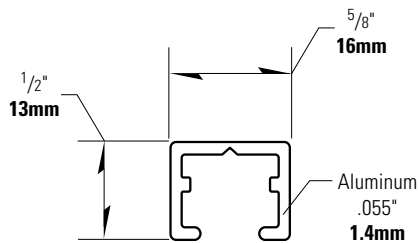

- ▶ Extruded aluminum track with white baked acrylic enamel finish
- ▶ Simple compact design is a cost-effective track alternative
- ▶ Splices and bends available for quick on-site installation
- ▶ Manufactured in 8' (2.44m) or 16' (4.88m) lengths to accommodate any application



IPC.503/REV.8

P.O. Box 406 · Muskego, Wisconsin 53150 USA
inprocorp.com
Nationwide 800.222.5556/Fax 888.715.8407
International Sales 262.679.5521/Fax 262.679.5524

INPRO CORPORATION
Interior and Exterior Architectural Products

Nanotrak Cubicle Track Suggested Specifications

PART 1 - GENERAL

1.01 SUMMARY

A. Cubicle Tracking Systems

1.02 SECTION INCLUDES

- A. Nanotrak Cubicle Tracking System
1. Overhead metal curtain track and guides
2. Track accessories and attachments

1.03 SUBMITTALS

- A. Product Data: Manufacturer's printed product data for each type of cubicle tracking system specified.
- B. Detail Drawings: Mounting details with the appropriate fasteners for specific project substrates.
- C. Samples: Verification samples of cubicle track, 4" (102mm) long, in full size, with carriers and end cap.
- D. Manufacturer's Installation Instruction: Printed installation instructions for each cubicle tracking system.

1.04 DELIVERY, STORAGE AND HANDLING

- A. Deliver materials in unopened factory packaging to the jobsite.
- B. Inspect materials at delivery to assure that specified products have been received.
- C. Store in original packaging in a climate controlled location away from direct sunlight.

1.05 PROJECT CONDITIONS

- A. Environmental Requirements: Products must be installed in an interior climate controlled environment.

1.06 WARRANTY

- A. Standard Clickeze Limited Lifetime Warranty against material and manufacturing defects.

PART 2 - PRODUCTS

2.01 MANUFACTURER

- A. Acceptable Manufacturer: Clickeze, InPro Corporation, PO Box 406 Muskego, WI 53150 USA; Telephone: 800.222.5556, Fax: 888.715.8407, www.inprocorp.com
- B. Substitutions: Not permitted
- C. Provide all cubicle tracking systems from a single source.

2.02 TRACK MATERIAL

A. Cubicle Tracking System

1. Nanotrak, extruded aluminum cubicle track with white baked acrylic enamel finish. Aluminum shall be 6063-T5.
Dimensions: height $\frac{1}{2}$ " (13mm), width $\frac{5}{8}$ " (16mm).
CE700008 - 8 foot length (2.44m)
CE700016 - 16 foot length (4.88m)
2. Bent sections: Provide factory bent track sections with one-foot radii to mate with straight track sections:
CE7042 - 2' x 2', 45° bend
CE7092 - 2' x 2', 90° bend

2.03 TRACK COMPONENTS

- A. Track Splice: Provide molded thermoplastic splice to join track sections.
CE7017 - Track Splice
- B. End Caps: Provide molded thermoplastic end caps for end of track section.
CE7025 End Cap
- C. Wands: Provide wand to move curtain along track.
CE9224 - Adjustable Chain Wand 24" length (609mm)
CE100702 - Drapery Wand 33"
CE100679 - Drapery Wand 36"
CE100698 - Drapery Wand 48"
- D. Curtain Carriers: Provide non-binding carriers to accurately fit track. Carriers to be fitted to curtain to prevent accidental curtain removal. 2.2 carriers per lineal foot of track length, plus one extra carrier.
CE7019 - Nanotrak Slide Carriers
- E. Tie Backs: Provide curtain tie back to hold curtain back.
CE9251 - Curtain Tie Back - 48" (1.22m) long chain
Fabric Tie Back - 3" x 18", $\frac{3}{4}$ " white velcro each end.
- F. Adjustable Drop Chain: Provide drop chain and adjust on site to accommodate curtain at desired height for air/stream circulation.
CE9039 - Adjustable Drop Chain

PART 3 - EXECUTION

3.01 EXAMINATION

- A. Examine areas and conditions in which the cubicle tracking systems will be installed.
1. Complete all finishing operations, including painting, before beginning installation of cubicle tracking system materials.
2. Verify that surfaces and above ceiling supports are ready to receive work.

3.02 PREPARATION

- A. General: Prior to installation, clean substrate to remove dust, debris and loose particles.

3.03 INSTALLATION

- A. General: Locate the cubicle track as indicated on the approved detail drawing for the appropriate substrate and in compliance with the Clickeze installation instructions.
- B. Installation of Cubicle Tracking Systems:
 1. Install cubicle track, secure, rigid, and true to ceiling line.
 2. Slide carriers onto the track.
 3. Install end cap or stop device.
 4. Secure or suspend track to ceiling system.
 5. Install curtains on carriers ensuring smooth operation.

3.04 CLEANING

- A. At completion of the installation, remove any debris and clean surfaces in accordance with the Clickeze clean-up and maintenance instructions.

