


Installation Instructions

EZE•Swap Cubicle Curtain Snap Panel System

Please read all instructions before assembling panel system.

1. Attach mesh to cubicle track carriers.
2. Snap curtain panels onto mesh from each end.
3. Overlap curtain panels at desired width for complete privacy then snap to the end of panel

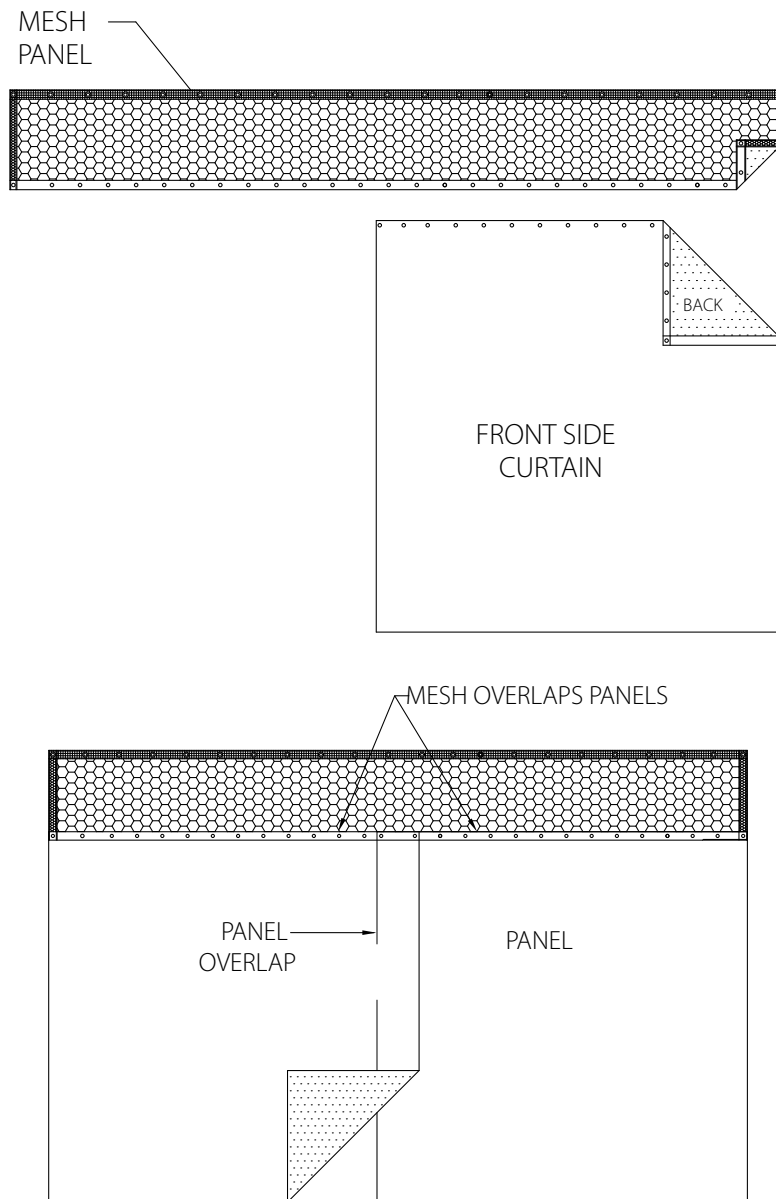

IPC.621Rev.1